


## How to attach E1

- ① Put Clamp E on B1 or B2 (lock Nut) and chain master cylinder body, then fix the plate to the reservoir tank with turning a nut in a counterclockwise fashion.  
(Note) When chaining, do not catch up wiring etc.  
(Note) Chain through under the master cylinder body (metal part).

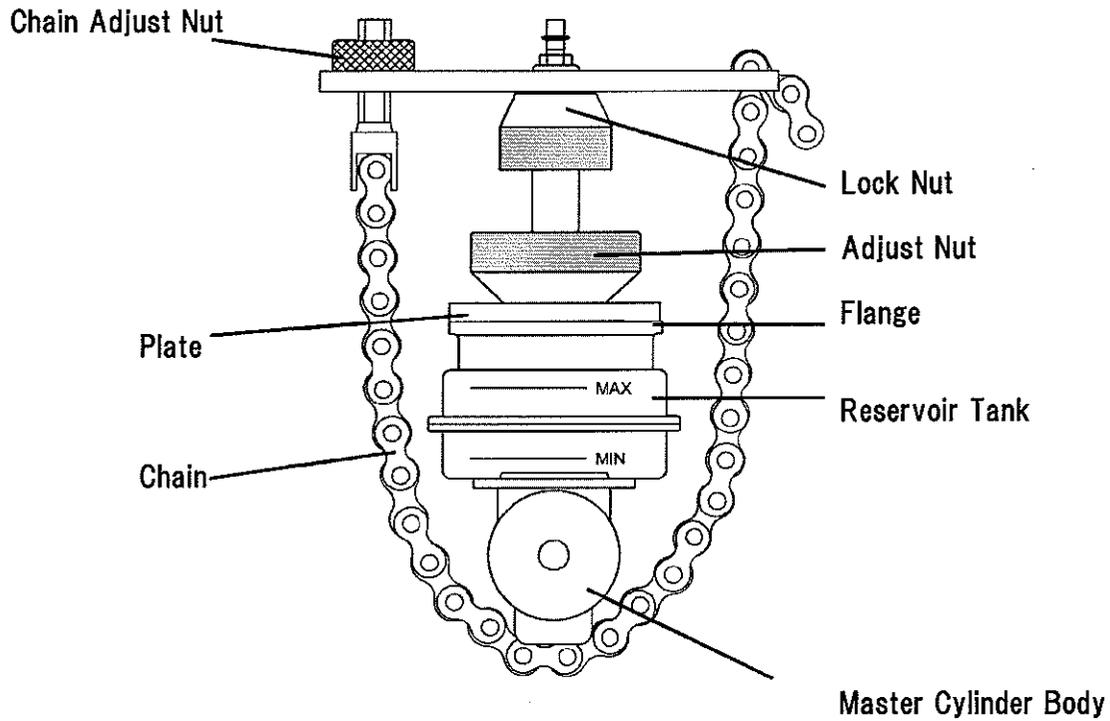

- ② Turn the chain adjust nut in a counterclockwise fashion till it's locked.